

Setup Documentation for the LID574 with the BLE-Base Black Box





Welcome to the GR252, LID574, LID674 settings

This wizard will guide you through the
GR252, LID574, LID674 settings.

Using this wizard you can edit the settings
of your handheld scanner.

To continue, click Next.



< Back

Next >

Cancel

1. Select Trovan unique

GR252, LID574, LID674 settings writer V105

Select transponders to read
Please select the transponder types the reader should read

trovan

Current firmware version: LID574V1.2.1CR-B

Trovan unique

PSK2

To increase reading performance only select required transponder types.

trovan

< Back Next > Cancel

2. Do not select (enable) any of the boxes on this page, leave all the values as listed.

GR252, LID574, LID674 settings writer V105

General settings
Select general settings

Use custom names Show only custom name

Read only new ID

Show last code

Shutdown time after read (s): 30

Trigger time (s): 5

Buzzer time after read (s): 0.1

Haptic feedback time after read (s): 0.1

Buzzer time custom name found (s): 0.0

Haptic feedback time custom name found (s): 0.0

trovan < Back Next > Cancel

3. Do not select (enable) the Save Codes box

GR252, LID574, LID674 settings writer V105

Save settings
Save tag code to reader memory options

Save codes Memory size (KB) 2048


with date/time Up to number of Trovan codes without date/time: 95325

Up to number of Trovan codes with date/time: 61680


Memory used: 0 %

trovan < Back Next > Cancel

4. Do not turn on this parameter, not needed, uncheck the Send ID by USB

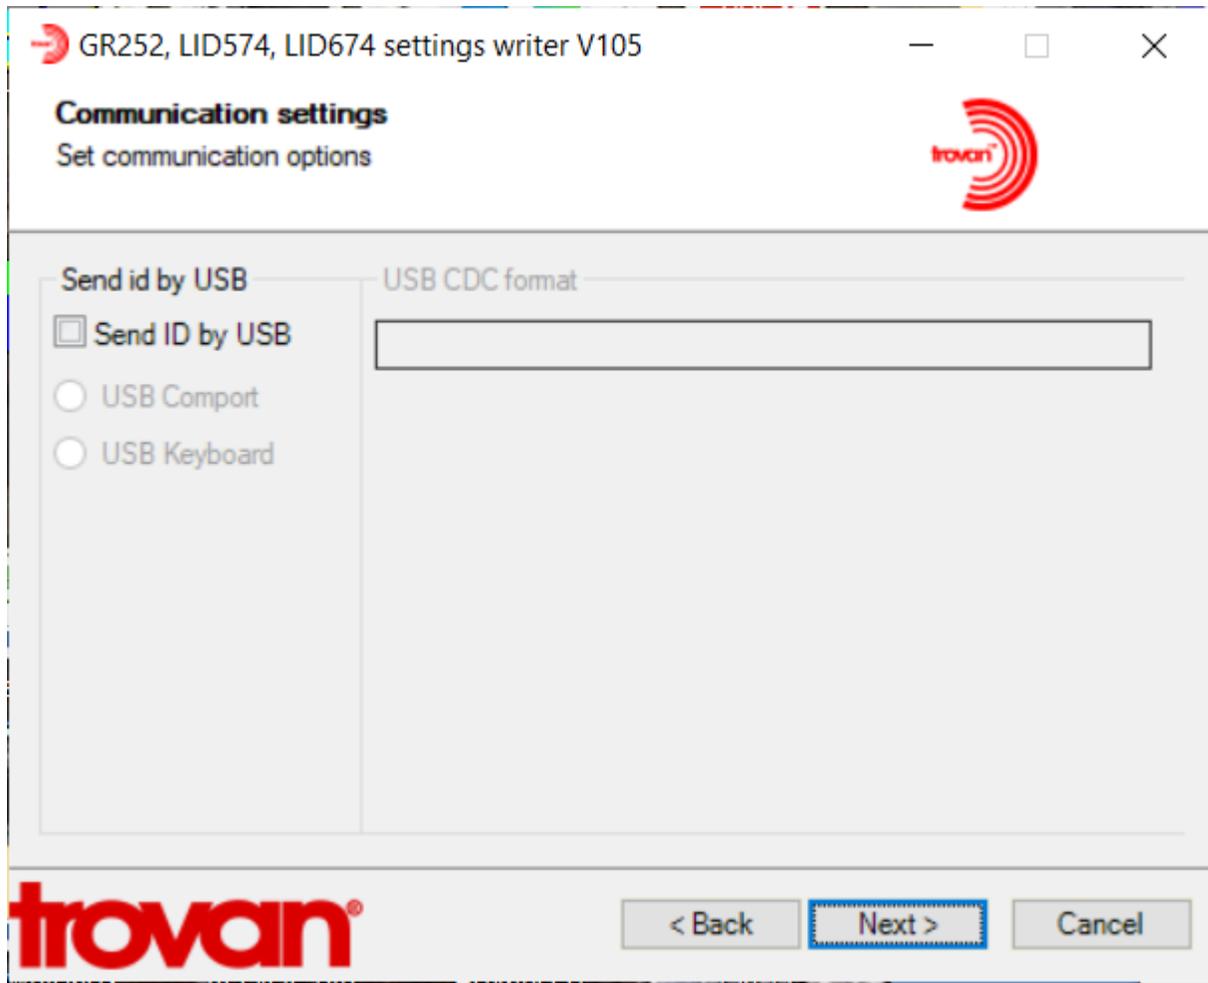

5. Turn on the Wireless Communication check the “Send ID by Bluetooth” box, select only ID to be transmitted, and select “Bootup Connect, after sent disconnect”

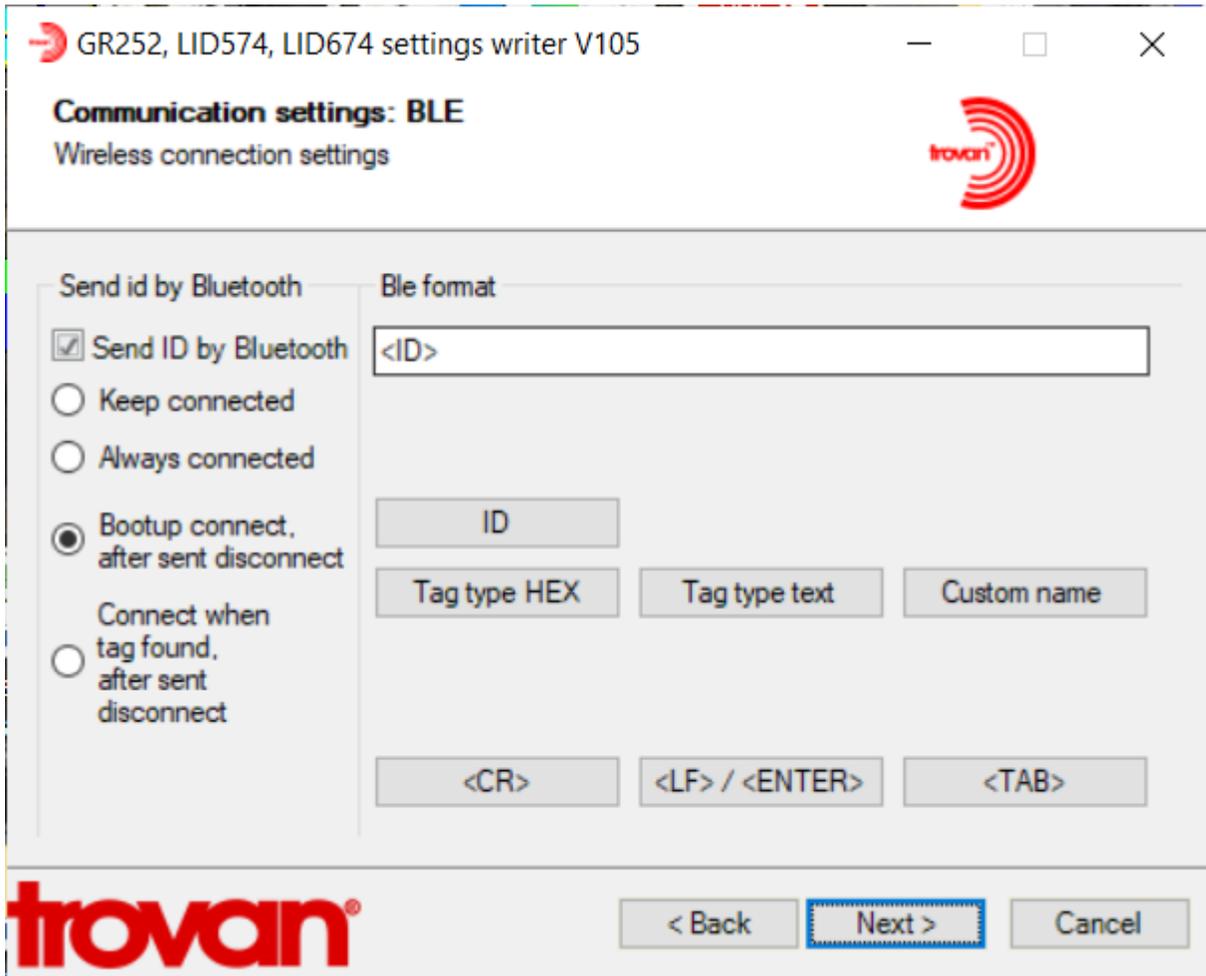

6. Select Finish

