Instructions for the Flex Programmer

- 1. Installing the software
 - Double click on the install Icon "Flex programmer V1.0.2"



• Select Next

🖟 Setup - Flex Programmer	
Select Destination Location Where should Flex Programmer be installed?	
Setup will install Flex Programmer into the following folder. To continue, click Next. If you would like to select a different folder, click	k Browse.
C:\Program Files\Dorset ID\Flex programmer	Browse
At least 10.5 MB of free disk space is required.	
< <u>B</u> ack Next >	Cancel

Select Next

Flex Programmer		
tart Menu Folder		
should Setup place the program's shor	tcuts?	ē
Setup will create the program's short	cuts in the following Start M	Ienu folder.
ntinue, click Next. If you would like to se	lect a different folder, click	Browse,
t ID\Flex programmer		Browse
	< <u>B</u> ack Next >	Cance
Select Next	< <u>B</u> ack Next >	Cance
Select Next Flex Programmer	< <u>B</u> ack Next >	Cance
Select Next Flex Programmer o Install is now ready to begin installing Flex Pro	< <u>B</u> ack <u>N</u> ext > grammer on your computer.	Cance
Select Next Flex Programmer o Install is now ready to begin installing Flex Pro nstall to continue with the installation, o e any settings.	< <u>B</u> ack <u>N</u> ext > grammer on your computer. r click Back if you want to re	Cance
Select Next Flex Programmer o Install is now ready to begin installing Flex Pro- nstall to continue with the installation, o e any settings. nation location: :'Program Files\Dorset ID\Flex program	< <u>Back</u> <u>Next</u> > grammer on your computer. r click Back if you want to re	Cance
Select Next Flex Programmer o Install is now ready to begin installing Flex Pro- nstall to continue with the installation, o e any settings. nation location: :'\Program Files\Dorset ID\Flex program Menu folder: orset ID\Flex programmer	< <u>Back</u> <u>Next ></u> grammer on your computer r click Back if you want to re mer	Car Car . (

< <u>B</u>ack

Install

Y

Cancel

2

• Select Install

<

😼 Setup - Flex Programm	er 💽 🗖 💌
	Completing the Flex Programmer Setup has finished installing Flex Programmer on your computer. The application may be launched by selecting the installed icons. Click Finish to exit Setup.
	Einish

- Select Finish
- Create a Shortcut Icon on your desktop for the Flex Programmer Application
 Double click on the Flex Programmer Icon

••• Flex programmer V	1.0.2		- x
DORSE			
Communi	cation	Status	
	\mathbf{X}	Progress:	
Optio	ns	Current action:	
Prefix	A	Please connect to the programmer	
Serialnumber length:	6 🌲		
Serialnumber:	000001 韋		
Next code:	A000001		
Programmed codes #:	0		
Contro			

Connect the Programmer to the computer using the USB Cable

If the computer displays found new device – for the correct driver point to: "C:\Program Files\Dorset ID\Flex programmer\Driver"

Select the virtual com port

ि Settings	_ = ×
PortName	COM29 -
Baudrate	19200 👻
Databits	8
Stopbits	One 🖃
Parity	None
Handshake	None
Normal	$\mathbf{\times} \mathbf{\triangleleft}$

Click on the Port Connection Icon

Flex programmer V1	.0.2	_ ×
		Status Progress:
Option	s	Current action:
Prefix	A	Port open, please setup and start
Serialnumber length:	6 🜩	
Serialnumber:	000001 🜲	
Next code:	A000001	
Programmed codes #:	0	
Control	5	

- Enter your Prefix
- Enter your Serialnumber length
- Enter your start number (Serialnumber)

Flex programmer V1.	0.2	_ ×
DORSE		
	ion Statu	s]
	Progress:	
Options	Current action:	
Prefix	A Port open, please setup	o and start
Serialnumber length:	5 🖶 🛛	
Serialnumber:	33987 🖨	
Next code:	A33987	
Programmed codes #:	0	
Controls		

• Click on the Arrow in the Controls box

Flex programmer V1.0.2			_ ×
		Progress: Current action:	
Prefix	A	Please insert a transponder	
Serialnumber.	33987 🜲		
Next code:	A33987		
Programmed codes #	0		
Controls			

Flex programmer V1.0.2	!	- >
		Status
Options Prefix Serialnumber length:	A 5	Current action: Programming transponder. Please wait.
Serialnumber.	33987 🛫	
(Controls)		

••• Flex programmer V1.0.2	– ×
DORSET 10	
IDENTIFICATION	
Communication	Status
	Progress:
Options	Current action:
Prefix A	Programming successful! Please remove
Serialnumber length: 5	
Serialnumber: 33988 🜩	
Next code: A33988	
Programmed codes # 1	
Controls	

Flex programmer V1.0.2		-	. x
DORSET	ПD		
IDENTIFICA	TION		
Communication		Status	
		Progress:	
Options		Current action:	
Prefix	A	Please insert a transponder	
Serialnumber length:	5		
Serialnumber.	33988 🗘		
Next code:	A33988		
Programmed codes #	1		
Controls			

Repeat

Flex programmer V1.0.2			- ×
DORSET	ID		
IDENTIFICA	TION		
Communication		Status	
		Progress:	
(Options)		Current action:	
Prefix	A	Please insert a transponder	
Serialnumber length:	5 🗘		
Serialnumber:	33989 🜲		
Next code:	A33989		
Programmed codes #	2		
Controls	8		

The number will increment by 1 every time you insert a transponder into the Programmer.

Click on the X to end programming.

You will see how many transponders have been programmed and the number it last programmed.

00 Flex programmer V1	.0.2		_ ×
DORSE			
Communic	ation	Status	
\bigcirc		Progress:	
Options		Current action:	
Prefix	A	Please insert a transponder	
Serialnumber length:	5 🜲		
Serialnumber:	33989 🚔		
Next code:	A33989		
Programmed codes #:	2		
Contro			

Note: a log file is created to show information during the programming secession in:

"C:\Documents and Settings\All Users\Application Data\Dorset ID\Flex programmer"

Sample:

6/20/2012 6:46:15 AM: Software started by: Wayne 6/20/2012 6:49:07 AM: Software closed by: Wayne 6/20/2012 6:50:19 AM: Software started by: Wayne 6/20/2012 7:06:34 AM: Code Passed! reprogrammed to: A33987 6/20/2012 7:08:14 AM: Code Hello Wayne reprogrammed to: A33988 6/20/2012 7:22:30 AM: Software closed by: Wayne